

この度は、ベスタクス TUB-1をお買い求め戴きまして、誠にありがとうございます。
ご使用前に、必ずこの取扱い説明書をお読みの上お取り付けください。

CONGRATULATIONS!

Thank you for purchasing Vestax's TUB-1.

Please read this mount instruction sheet to operate the TUB-1 safely and to enjoy its full spec.


※本製品はPC OS内の標準ドライバを使用します。その為、USB接続をするだけで音声データの入出力が可能になります。
(但し、お持ちのPCの種類によってはご使用頂けない場合もございます。ご了承下さいます様お願い致します。)

※This product uses the OS standard driver to operate and enables sound input/output via USB connection.
(Please be aware that certain computers do not enable operation with TUB-1)

TUB-1 USBボードについて/TUB-1 USB expansion board

TUB-1の回路基板には下図のように3ピンのオーディオ入出力端子(J2, J3)が付いています。
TUB-1のUSB端子に接続した機器側から見てJ2端子はアナログオーディオ入力用で、J3端子はアナログオーディオ出力用の端子となります。
TUB-1ボードの取付パネルにはUSB端子と赤色のLED表示ランプ(直径2mm)が配置されています。(右図参照)

Two 3pin audio input/output connectors (J2,J3) are located on the circuitry board of TUB-1 as in the image below. From looking from a device connected to TUB-1, J2 is for analog audio input and J3 is for audio analog output. A USB terminal and red LED (2mm diameter) is set on the front panel.

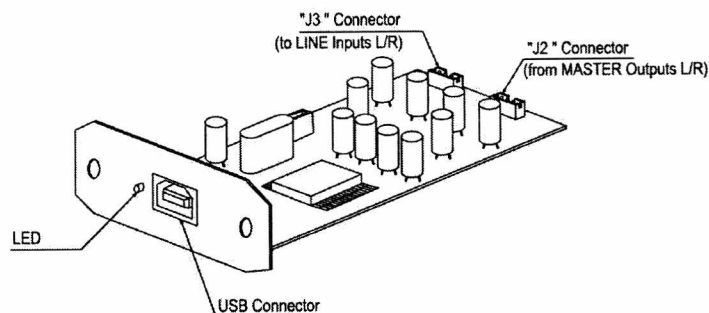

主な仕様/Main specifications

USB Version : USB 2 / (Drive Power supply = +5V DC)
Analog Audio Outputs (J3) : -10dBV (0.3v) / impedance = 100ohm
Analog Audio Inputs (J2) : -10dBV (0.3V) / impedance = 47kohm